


Projects > Table Runner

Beautify your dinner table with this gorgeous table runner!

Materials and Supplies

- [Brother Sewing/Embroidery Machine](#) (Machine used in this project is the [ULT2001](#))
- [Brother Embroidery Thread](#) (Colors: #323, #058, #513, #515, #001, #019, #085, #086)
- [Brother Water Soluble Stabilizer](#)
- [PE-Design®](#) (Version 3 or 4)
- [Brother Memory Card - Lace](#)
- [Brother Embroidery Hoop](#) (10.2" x 6.30")
- Fabric large enough to create the runner (approx. 27"x45")
- Yard stick
- Large plain paper (Approx. 27 inch X 30")
- Water soluble marking pen
- Fray check
- Orange handle awl that comes with the machine or other instrument to make a hole
- Temporary adhesive spray

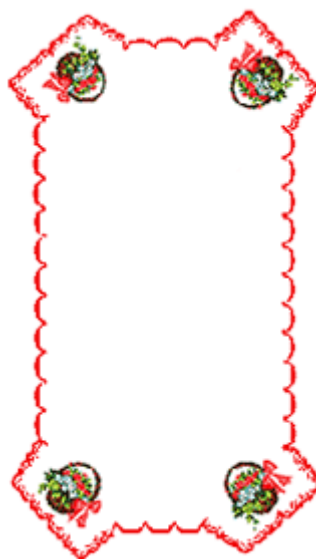

Instructions

1. Install Brother Memory Card #SA344 into PE Design®.
2. Open Layout and Editing and import design LI008.pec using a 7.09-inch X 5.12-inch stitching area
3. Change the color of the design so that it is easier to see. Select SEW, change color of stitch object. Double click on the color and select a darker color to work with, then click on OK.
4. Select EDIT, NUMERICAL SETTING, ROTATE and rotate the design to 41°.
5. Select the design and move it to the right side of the embroidery field.
6. Duplicate the design by selecting - EDIT, DUPLICATE, then mirror image the design.
7. Line the designs up next to each other in a straight line, with the edges just touching.

Projects > Table Runner

8. Write the design to a memory card or a floppy disk. Print the new design to use as a template. Select - FILE, PRINT. Print only the first page. Trim the excess paper around the design area. Using the awl place holes in the template to transfer the position of the design onto the fabric. **See Figure #1** (holes indicated by black dots)

9. Using the water-soluble marking pen and yardstick, mark a rectangle 15 X 26 inches in the center of the fabric area. Place the design template on the corners at a 45° angle with the sides touching the lines. **See Figure #2.**

10. Repeat placement markings for all four corners.

11. Hoop the water-soluble stabilizer and spray coat it with temporary adhesive spray. Carefully place the fabric so that the corner placement marks are aligned with the hoop and within the sewing area. Use the plastic hoop grid to help align the design. Stitch out the design.

12. On the ULT2001 touch the Built in Design area and select the basket (third design on the first row). Position the basket within the previously stitched lace design area. Stitch the basket design.

13. Remove the runner from the hoop and repeat steps 10 and 11 for each corner.

14. Turn the machine off. Remove the embroidery arm and set the machine up for sewing with the "N" foot. Use a thread color matching the fabric in both the top and bobbin.

15. Select CHARACTER DECORATIVE STITCH and choose Satin Stitch 9-01. Enlarge the pattern X3. Set the stitch width to 7.0mm and the stitch length to .2 mm, then select REPEAT. If you sew keeping the bulk of the fabric to your left, you will need to MIRROR IMAGE the pattern before sewing. **See Figure #3**

16. Placing a piece of tear-away stabilizer under the fabric, sew the repeating pattern between the end points of the corner designs. After finishing all four sides, remove the stabilizer. Apply a small amount of Fray Check around the entire stitched area. When the Fray Check is dry carefully trim away the excess fabric outside the design.

Figure #1

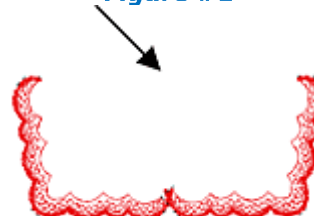


Figure #2

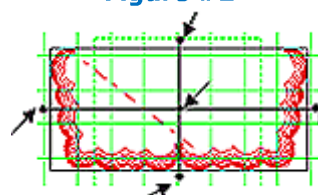


Figure #3

